

PCDJ MIDI Map

For: Numark MixTrack Pro 3

(07/17/2015 - Version: 1.0)



Pad Modes

The MixTrack Pro 3 supports three padmodes: Manual Loop, Auto Loop, and Sampler. To access the different pad modes, Press and hold the 'Pad Mode' button while pressing either the Manual Loop, Auto Loop, or Sampler button to engage the pad mode that you desire.



Pad Mode: Sampler

When in Sampler Pad Mode, pressing buttons 1 through 4 (and 5 through 8 on the other deck) will play the sample assigned to the respective position in your sample bank.



Pad Mode: Auto Loop

When in Auto-Loop Pad Mode, pressing on buttons 1/4 through 16 will engage/disengage the respective auto-loop.



Pad Mode: Manual Loop


When in Manual Loop Pad Mode, pressing:

IN	Sets the beginning-point of the loop.
OUT	Sets the end-point of the loop, and begins looping.
ON/OFF	If currently looping, exits the loop. If not looping, re-engages the loop.
1/2 or *2	Halves the current loop size.
Shift + 1/2 or *2	Doubles current loop size.

Pitch and Tempo

Pitch Bend

Press and hold down the Pitch 'Bend Down' button to gradually down-pitch the currently playing track. Likewise for the 'Pitch Bend Up' button.

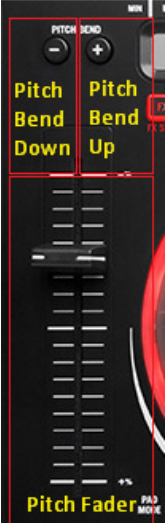

Pitch/Tempo Fader

Adjust the 'Pitch Fader' slider either up or down to adjust the pitch for the currently playing track, within the 'Pitch/Tempo Range' that has been set in PCDJ Dex 3 or Red Mobile options menu.

FX Controls



Touch Strip

The Touch Strip is used to the Wet/Dry FX parameter for the currently selected FX.

FX 1

Enables/Disables the Echo FX.

FX 2

Enables/Disables the Delay FX.

FX 3

Enables/Disables the Flanger FX.

TAP


Adjust BPM by tapping the button.

FX Parameter Knob

The FX Parameter Knob allows you to adjust both FX Parameter 1 and FX Parameter 2 of the currently selected FX:

Shift + FX Parameter Knob turn	Parameter 1
Shift + FX Parameter Knob turn	Parameter 2

Volume/Browser Controls

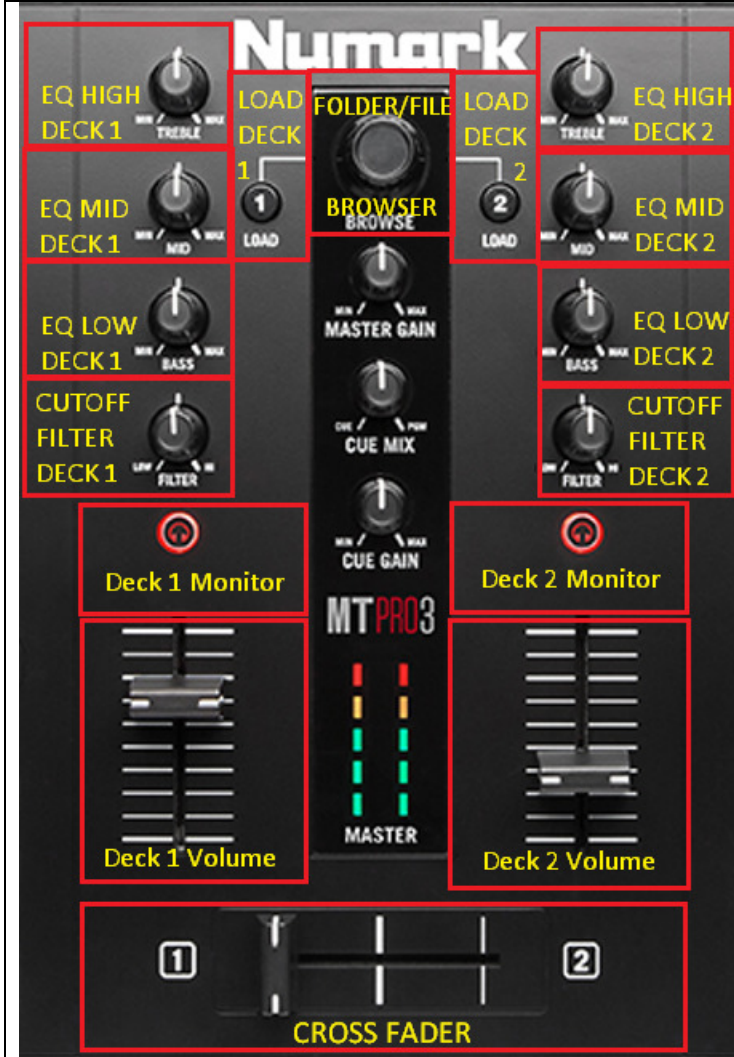

EQ High Knob

Adjusts the High EQ setting for the currently loaded track.

EQ Mid Knob

Adjusts the Mid EQ setting for the currently loaded track.

EQ Low Knob

Adjusts the Low EQ setting for the currently loaded track.

Cut-Off Filter Knob

Adjusts the filter.

Deck Monitor Button

Allows you to listen to the currently playing track through the headphones, from the soundcard that you currently have selected in DEX 3 / Red Mobile 3 sound configuration options for previewing/monitoring.

Deck Volume Slider

Adjusts the deck volume.

Cross Fader Slider

Adjust this slider to fade from one deck to the other.

Folder/File Browser Button/Knob

The Folder/File Browser Button toggles between Folder List Browser Mode and File List Browser Mode.

The Knob, when turned allows you to navigate the highlighted Folder or File list, depending on which Browser Mode you've toggled.

Load Deck Button

The Load Deck Button serves two purposes: Select/Expand a folder to view the files/folders within (when in Folder Browser Mode), and to load the currently highlighted track into the respective deck (When in File Browser Mode)

Jog Wheel, Cue Points, and Play controls



Jog Wheel	
Jog Mode: On	Scratches the Track
Jog Mode: Off	Moves the Track
Jog Mode: Off + Shift	Searches the Track
Jog Mode Button	
Enables/Disables Scratch Mode	
Shift Button	
Held down when pressing another button that offers alternate functionality, accesses that alternate functionality.	
Sync Button	
Sync	Beat Matches Deck with Master Deck.
Shift + Sync	Tempo Matches Deck with Master Deck.
Cue Button	
Cue	Goes to Cue point.
Shift + Cue	Goes to beginning of Track.
Play/Pause Button	
When Paused or Cued, Plays the track. When playing, Cues the track.	
Shift + Play/Pause	Engages / Disengages Brake Effect.
Cue Points	
CUE 1-4	Sets a Cue Point. When Cue Point has been set, moves track to the location of that Cue Point.
Shift + Cue 1-4	Deletes the Cue Point that has been set.